



MODEL NUMBER: XRM901-4-0-GB-XX

IMPROX RRM

ImproX (RRM) Registration Remote Reader INSTALLATION MANUAL

SPECIFICATIONS

| | |
|----------------------------------|--|
| Working Environment | The ImproX RRM is designed to work in an indoor environment similar to IP42. The ImproX RRM is, therefore, NOT sealed against water. |
| Buzzer | |
| Tone..... | Four volume, single tone (Software may support single tone only). |
| Status Indicators | |
| Status LED..... | Bi-coloured Red or Green. |

INSTALLATION INFORMATION

Accessories

Find the following when unpacking the Remote Reader:

- An ImproX (RRM) Registration Remote Reader housed in a Natural, Anodised, Aluminium extruded Cabinet. The ImproX RRM consists of a Front Cover, a Base Frame and two Side Plates (the assembly includes 2 m (7 ft) of flat, 4-core Cable).
- An extra Serial Number Label.

General

Remember the following when installing the Remote Reader:

Distance between the Registration Interface and the ImproX RRM

The maximum cable distance between the ImproX Registration Interface and the ImproX RRM, MUST NOT exceed 2 m (7 ft).

Blank Space

Mounting the Cabinet

CAUTION: Make certain that you place the Registration Remote Reader on a vibration-free surface.

There is no installation required for the ImproX RRM.

Place the Remote Reader in a convenient location near the Registration Interface and Host PC.

Connecting the ImproX RRM

Figure 1 shows a typical connection diagram for the ImproX RRM.

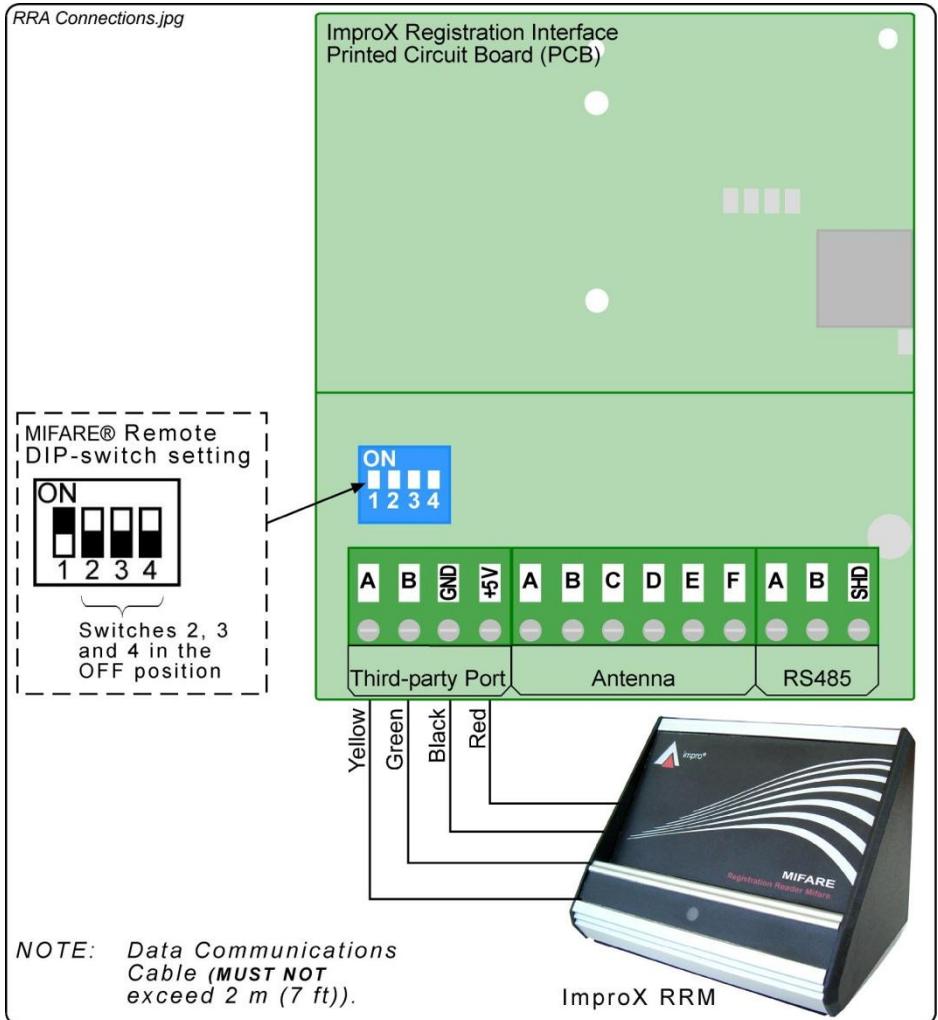


Figure 1: Typical ImproX RRM Electrical Connections

NOTE: *On powering up, the Remote Reader will produce a beep sound and the Status LED will illuminate solid Red.*

The ImproX RRM will not read Tags until configured in the Software. Details of these procedures are located in the IXP120, IXP200 or IXP300 and IXP400 Software Manuals.

Serial Number Label

The loose Serial Number Label (packaged with the Remote Reader) identifies the type of Remote Reader and its Serial Number.

GUARANTEE OR WARRANTY

This product conforms to our Guarantee or Warranty details placed on our Web Site, to read further please go to www.impro.net.

USER NOTES

USER NOTES

This manual is applicable to the ImproX (RRM) Registration Remote Reader, XRM901-4-0-GB-03. (The last two digits of the Impro stock code indicate the issue status of the product).

| | | | |
|------------------|----------|----------|---|
| XRM300-0-0-GB-04 | Issue 05 | Jul 2007 | ImproX RRM\English Manuals\LATEST ISSUE \ImprXRRM-inism-en-05.docx |
|------------------|----------|----------|---|